

Quick Installation Guide

WDR-1200AC

1200Mbps 802.11ac Dual-Band Wireless Gigabit Router



1. Package Contents

Thank you for choosing PLANET WDR-1200AC. Before installing the router, please verify the following items in the package box.

Wireless Router



Quick Guide



12V / 2A Power Adapter



Ethernet Cable




If there is any item missing or damaged, please contact the seller immediately.

- 1 -


2. Hardware Installation

Step 1: Connect the Power Adapter provided in the package to the WDR-1200AC. The Power LED on the front panel will turn on accordingly.

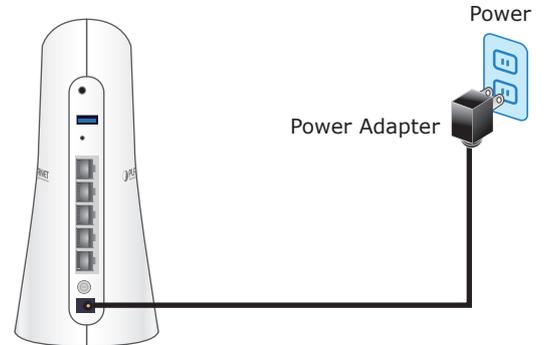

- 2 -

Step 2: Follow the figure below to connect the network devices. It depends on your network environment to connect the WAN port to a cable/xDSL modem, or the Ethernet directly in your place.

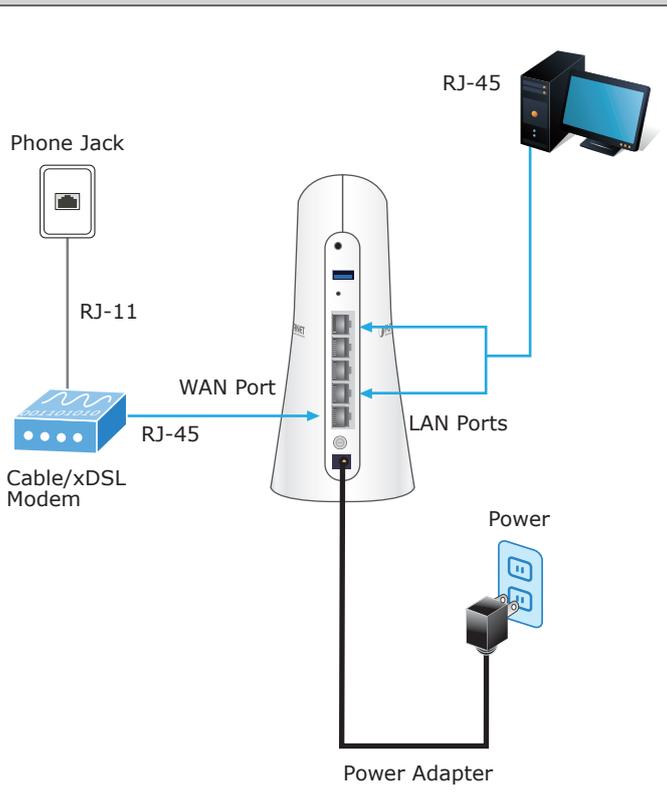



- 3 -

3. Network Configuration (Windows 7)

A computer with a wired Ethernet connection is required for the first-time configuration of the Wireless Router.

Steps : Set your computer to get an IP address from the Wireless Router:

1. Click **"Start"** button located in the lower-left corner of the screen.
2. Click **"Control Panel"**.
3. Double-click **"Network and Sharing Center"** icon.
4. Click **"Change Adapter Settings"**.
5. Double-click **"Local Area Connection"** icon.
6. Select **"Internet Protocol Version 4 (TCP/IPv4)"** and click **"Properties"** button.
7. Select **"Obtain an IP address automatically"** and **"Obtain DNS server address automatically"**, and then click **"OK"** button twice to save the configuration.

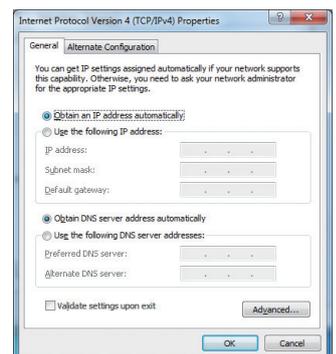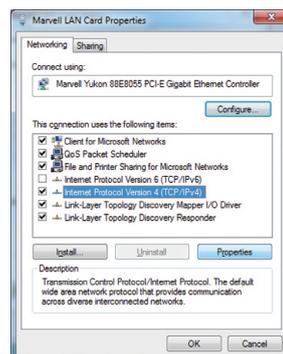

- 4 -

4. Enter into the Web Management

Default IP Address: **192.168.1.1**


Default User Name: **admin**

Default Password: **admin**

Default SSID: **WDRT-1200AC_2.4G**
WDRT-1200AC_5G

Default Wireless Encryption Type: **None**

Step 1: The Web management allows you to access and manage the WDRT-1200AC easily. Launch the Web browser and enter the default IP address <http://192.168.1.1>

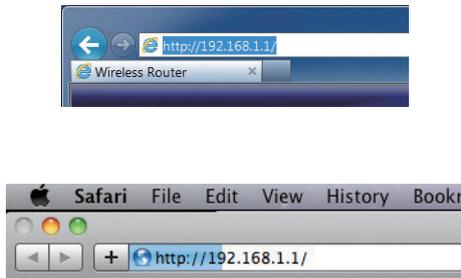


- 5 -

Step 2: When you enter into the Web User Interface, please enter the User Name and Password in the login window. The default User Name and Password are both **"admin"**. Then click **"Login"** button to continue.



Step 3: After you enter into the Web User Interface, please follow the indications on the screen to quickly set up for the Internet connection.

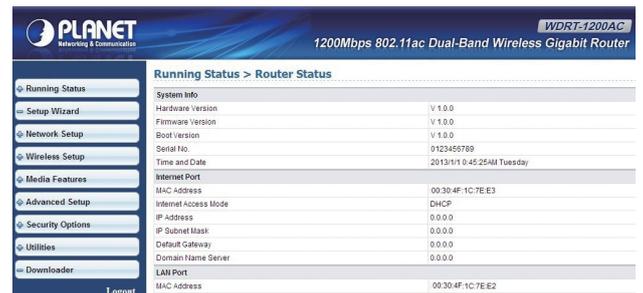


- 6 -

5. Wireless Network Connection

Step 1: Right-click on the **network icon** displayed in the system tray.



Step 2: Highlight the wireless network (SSID) to connect and click **[Connect]** button.

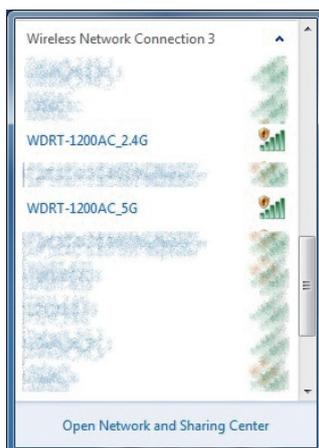

- 7 -

Step 3: Enter the **encryption key** of the WDRT-1200AC if necessary.

You have already finished the configuration of the WDRT-1200AC. Now you can use your iPhone, iPad, laptop, and any other Wi-Fi device to connect with it wirelessly and start surfing the Internet.

Further Information

The above steps introduce simple installations and configurations for the WDRT-1200AC. For further configurations of Wireless Dual Band, WAN, LAN, Firewall, Virtual Server, DMZ, and DDNS, please refer to the user manual which you can download from the website.

<http://www.planet.com.tw/en/support/download.php?type1=4&model=48557&type=3>



If you have further questions, please contact the local dealer or distributor where you purchased this product.

2011-E50330-000

- 8 -