





1200Mbps 802.11ac Dual Band Wireless Gigabit Router

WDRT-1202AC



1. Package Contents

Thank you for choosing PLANET WDRT-1202AC. Before installing the router, please verify the contents inside the package box.

WDRT-1202AC	Quick Guide	Ethernet Cable	Power Adapter
			




If there is any item missing or damaged, please contact the seller immediately.


- 1 -

2. Physical Introduction

Front Panel of WDRT-1202AC

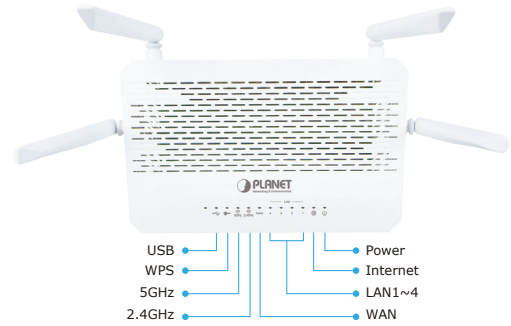


Rear Panel of WDRT-1202AC

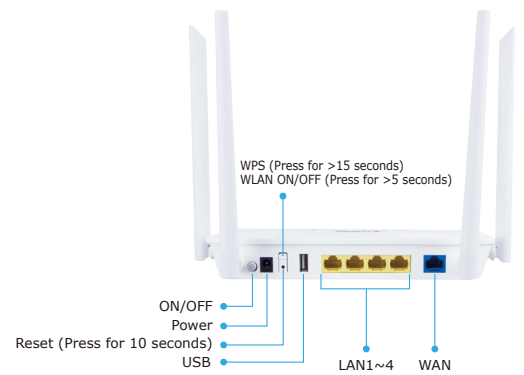


- 2 -

3. Hardware Installation

Step 1: Locate the WDRT-1202AC in an optimum place, and adjust the antenna for the best coverage.

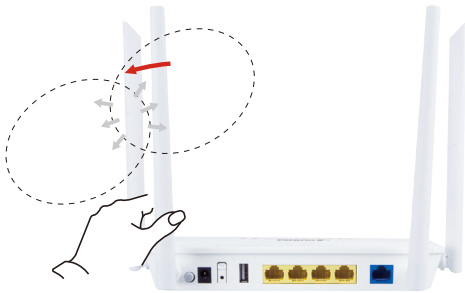


Step 2: Connect the Power Adapter provided in the package to the WDRT-1202AC. The Power LED on the front panel will turn on accordingly.

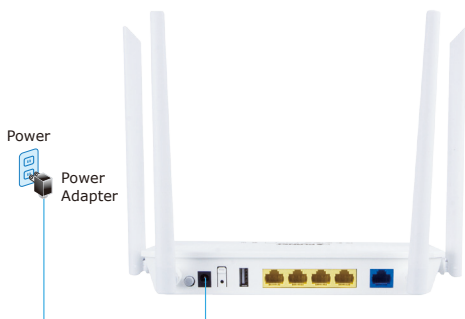

- 3 -

Step 3: Follow the figure below to connect the network devices. It depends on your network environment to connect the WAN port to a Cable/xDSL modem, or the Ethernet directly in your place.

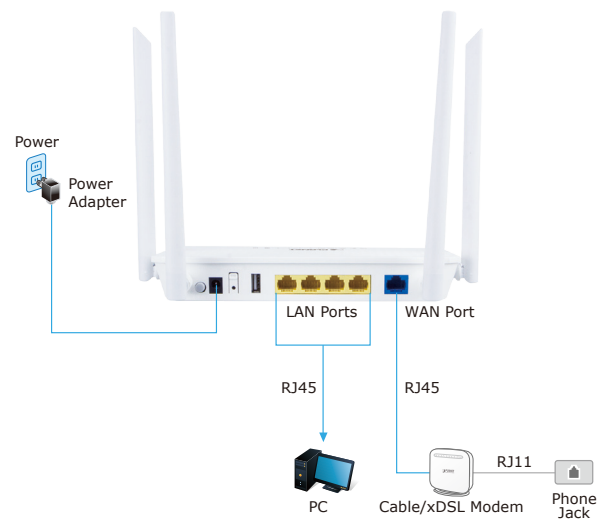


- 4 -

4. Network Configuration (Windows 10)


Set your computer to get an IP address from the Wireless Router:

1. Click the **"Start"** button located at the lower-left corner of your computer.
2. Click **"Settings"**.
3. Double-click the **"Network & Internet"** icon.
4. Click **"Change Adapter Options"**.
5. Double-click **"Local Area Connection"**
6. Select **"Internet Protocol Version 4 (TCP/IPv4)"** and click **"Properties"**.
7. Select **"Obtain an IP Address automatically"** and **"Obtain DNS Server Address automatically"**, and then click the "OK" button twice to save the configuration.

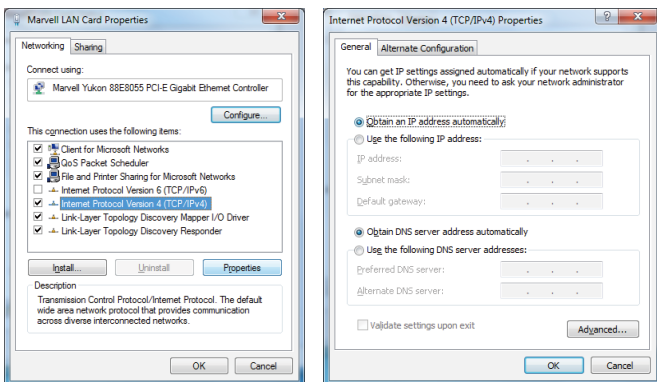


- 5 -

Step 3: Follow the wizard to configure WAN, Wi-Fi and router password.

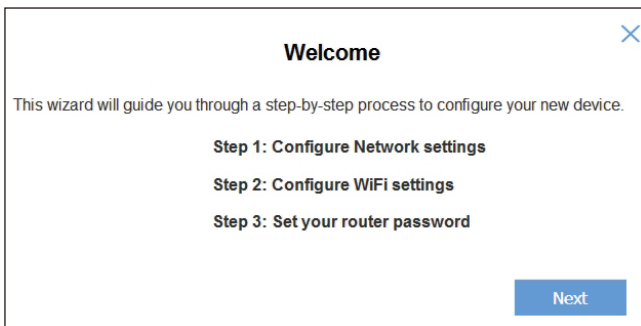

Step 4: You can see the Web management UI of the WDRT-1202AC after configuring this device.

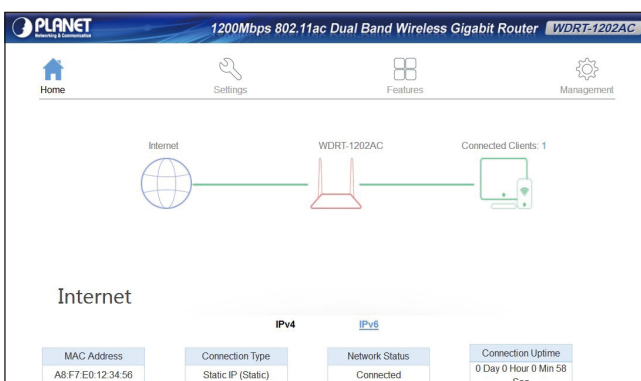

- 7 -


5. Enter into the Web Management

Default IP Address: **192.168.1.1**
Default User Name: **admin**
Default Password: **admin**
Default SSID: **PLANET_2.4G_XXXX**
PLANET_5G_XXXX
("X" means the last 4 digits of the MAC address.)

Step 1: The Web management allows you to access and manage the Wireless Router easily. Launch the Web browser and enter the default IP address **http://192.168.1.1**



Step 2: When the login window pops up, please enter the User Name and Password. The default User Name and Password are both **"admin"**. Then click the **"Log In"** button to continue.

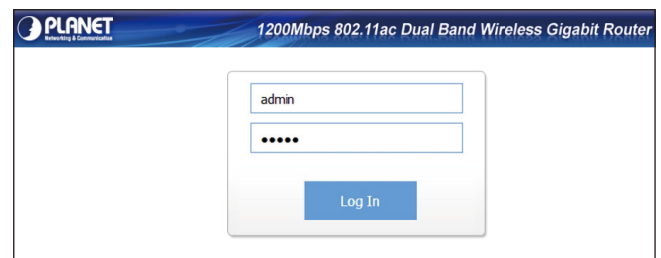

- 6 -

Further Information:

The above steps introduce the simple installations and configurations of the WDRT-1202AC. For further configurations of LAN, Wireless, Access Control, etc, please refer to the user manual, which can be downloaded from the website.

<https://www.planet.com.tw/en/support/download.php?method=keyword&keyword=WDRT-1202AC&view=3#list>



If you have further questions, please contact the local dealer or distributor where you purchased this product.



2011-E50340-001

- 8 -