

# **Managed Metro Ethernet Switch**

## **MGSW/MGSD/MGS Series**

### Quick Installation Guide

# Table of Contents

1. Package Contents.....	3
2. Requirements.....	4
3. Wiring the Power Inputs .....	5
4. Terminal Setup.....	7
4.1 Logging in to Console.....	8
4.2 Configuring IP Address.....	10
4.3 Storing Current Switch Configuration .....	11
5. Starting Web Management .....	12
5.1 Logging in to the Managed Metro Switch .....	13
5.2 Saving Configuration .....	17
6. Recovering Back to Default Configuration .....	18
7. Customer Support.....	19

# 1. Package Contents

Thank you for purchasing PLANET L3 and L2+ Managed Metro Ethernet Switches. The descriptions of these models are shown below:

MGSD-10080F	L2+ 6-Port 100/1000X SFP + 2-Port 1G/2.5G SFP + 2-Port 10/100/1000T Managed Metro Ethernet Switch
MGS-6320-2T6S2X	L3 2-Port 100/1000T + 2-Port 100/1000X SFP + 4-Port 2.5G SFP + 2-Port 10G SFP+ Metro Ethernet Switch
MGSW-28240F	L3 14-Port 100/1G SFP with 4 shared 10/100/1000T + 10-Port 1G/2.5G SFP + 4-Port 10G SFP+ Metro Ethernet Switch

**“Managed Metro Switch”** is used as an alternative name in this Quick Installation Guide.

Open the box of the Managed Metro Switch and carefully unpack it. The box should contain the following items:

Model Name		MGSD-10080F	MGS-6320-2T6S2X	MGSW-28240F
Package Item				
The Managed Metro Switch		■	■	■
Quick Installation Guide		■	■	■
RJ45 to RS232 Console Cable		■	■	■
Rubber Feet		■	■	■
Two Rack-mounting Brackets with Attachment Screws		■	■	■
Power Cord		■	■	■
Dust Caps	RJ45	3	3	5
	SFP	8	8	28

If any item is found missing or damaged, please contact your local reseller for replacement.

## 2. Requirements

- Workstations running Windows 7/8/10/11, macOS 10.12 or later, Linux Kernel 2.6.18 or later, or other modern operating systems are compatible with TCP/IP protocols.
- Workstations are installed with Ethernet NIC (Network Interface Card)
- **Serial Port Connection** (Terminal)
  - The above workstations come with **COM port** (DB9) or **USB-to-RS232** converter.
  - The above workstations have been installed with **terminal emulator**, such as Tera Term, PuTTY or Hyper Terminal included in Windows XP/2003.
  - **Serial cable** -- one end is attached to the RS232 serial port, while the other end to the console port of the Managed Metro Switch.
- **Ethernet Port Connection**
  - Network cables -- Use standard network (UTP) cables with RJ45 connectors.
  - The above PC is installed with Web browser.



### Note

It is recommended to use Google Chrome, Microsoft Edge or Mozilla Firefox to access the Managed Metro Switch. If the Web interface of the Managed Metro Switch is not accessible, please turn off the anti-virus software or firewall and then try it again.

### 3. Wiring the Power Inputs

The Front Panel of the Managed Metro Switch indicates a DC inlet power socket and consists of one terminal block connector within 6 contacts. Please follow the steps below to insert the power wire.

#### MGSD-10080F Front Panel

 


Figure 3-1: MGSD-10080F Switch Front Panel

#### MGS-6320-2T6S2X Front Panel




Figure 3-2: MGS-6320-2T6S2X Switch Front Panel

#### MGSW-28240F Front Panel



Figure 3-3: MGSW-28240F Switch Front Panel

 Tighten the wire-clamp screws for preventing the wires from loosening.

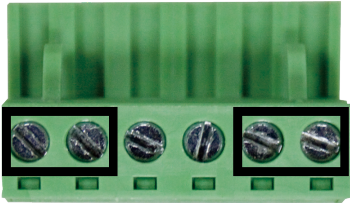

1 2 3 4 5 6  
V1+ V1- V2+ V2-  
Power 1 Power 2

	Positive (+) Pin	Negative (-) Pin
Managed Metro Switch	Pin 1 / 5	Pin 2 / 6




Note

The wire gauge for the terminal block should be in the range from **12** to **24** AWG.

## 4. Terminal Setup

To configure the system, connect a serial cable to a COM port on a PC or notebook computer and to the DB9 type of serial port of the Managed Metro Switch.

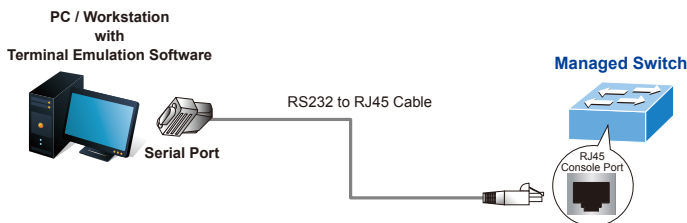 


**Figure 4-1:** Managed Metro Switch Console Connectivity

A terminal program, such as Tera Term or PuTTY, is required to make the software connection to the Managed Metro Switch.

1. Run terminal program on the OS.
2. When the following screen appears, make sure that the COM port should be configured as:

- ◆ Baud: 115200
- ◆ Data bits: 8
- ◆ Parity: None
- ◆ Stop bits: 1
- ◆ Flow control: None

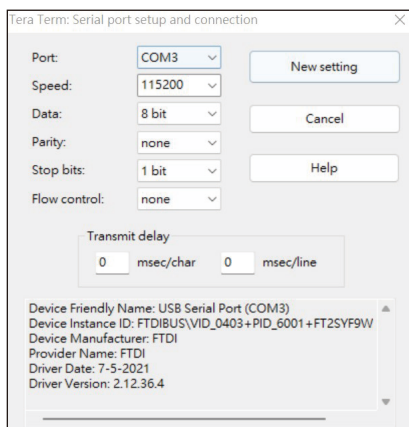 

**Figure 4-2:** COM Port Configuration

## 4.1 Logging in to Console

Once the terminal is connected to the device, power on the Managed Metro Switch, and the terminal will display “running testing procedures”.



Note

The following console screen is based on the MGSW-28240F. The display of the MGSW/MGSD/MGS Series is the same as that of the MGSW-28240F.

Then, the following message asks to log in username and password. The factory default username and password are shown as follows and the login screen in Figure 4-3 or Figure 4-5 appears.



Note

The following console screen is based on the firmware version before **February of 2024**.

```
Username: admin
Password: admin
```

```
Press ENTER to get started
Username: admin
Password:
MGSW-28240F#
```

Figure 4-3: Managed Metro Switch Console Login Screen



Note

1. For security reason, please change and memorize the new password after this first setup
2. Only accept command in lowercase letter under console interface.





 
## Note

The following console screen is based on the firmware version of **February of 2024 or after**.

Default Username: **admin**

Default Password: **sw + the last 6 characters of the MAC ID in lowercase**

Find the MAC ID on your device label. The default password is "sw" followed by the last six lowercase characters of the MAC ID.

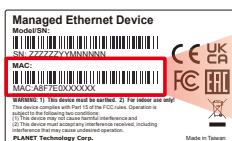

MAC ID: A8F7E0XXXXXX  
Default Password: swxxxxxx  
("x" means the last 6 digits of the MAC address.  
All characters should be in lowercase.)

Figure 4-4: MAC ID Label

Enter the default username and password, then set a new password according to the rule-based prompt and confirm it. Upon success, press any key to return to the login prompt. Log in with "admin" and the "new password" to access the CLI.

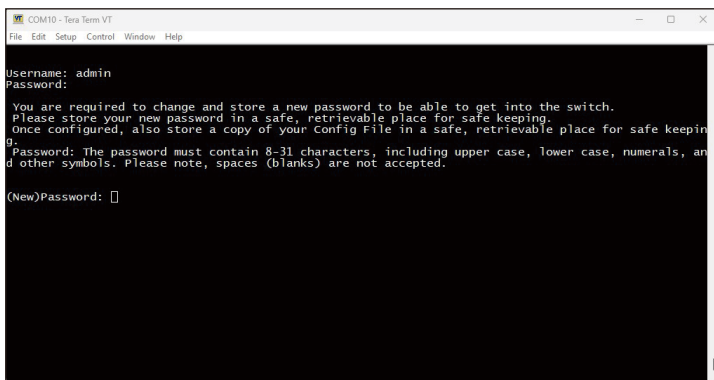 


Figure 4-5: Console Login Screen

The user can now enter commands to manage the Managed Metro Switch. For a detailed description of the commands, please refer to the following chapters.

## 4.2 Configuring IP Address

The Managed Metro Switch is shipped with default IP address shown below.

```
IP Address: 192.168.0.100  
Subnet Mask: 255.255.255.0
```

To check the current IP address or modify a new IP address for the Switch, please use the procedures as follows:

### ■ Showing the Current IP Address

1. At the “#” prompt, enter “**show ip interface brief**”.
2. The screen displays the current IP address as shown in Figure 4-6.

```
Press ENTER to get started  
Username: admin  
Password:  
MGSW-28240F# show ip interface brief  
Interface Address Method Status  
-----  
VLAN 1 192.168.0.100/24 Manual UP  
MGSW-28240F#
```

Figure 4-6: IP Information Screen

### ■ Configuring IP Address

3. At the “#” prompt, enter the following command and press <Enter> as shown in Figure 4-7.

```
MGSW-28240F # configure terminal  
MGSW-28240F (config)# interface vlan 1  
MGSW-28240F (config-if-vlan)# ip address 192.168.1.100 255.255.255.0
```

```
MGSW-28240F# configure terminal  
MGSW-28240F (config)# interface vlan 1  
MGSW-28240F (config-if-vlan)# ip address 192.168.1.100 255.255.255.0  
MGSW-28240F (config-if-vlan)# exit  
MGSW-28240F (config)#
```

Figure 4-7: Configuring IP Address Screen

The previous command would apply the following settings for the Managed Metro Switch.

```
IP Address: 192.168.1.100  
Subnet Mask: 255.255.255.0
```

4. Repeat step 1 to check if the IP address has changed.

If the IP is successfully configured, the Managed Metro Switch will apply the new IP address setting immediately. You can access the Web interface of the Managed Metro Switch through the new IP address.

### 4.3 Storing Current Switch Configuration

In the Managed Metro Switch, the running configuration sequence `running-config` can be saved from the RAM to FLASH by **"copy"** command, so that the running configuration sequence becomes the start-up configuration file, which is called configuration save.

At the `"#"` prompt, enter the following command and press `<Enter>`.

```
# copy running-config startup-config
```

```
MGSW-28240F# copy running-config startup-config  
Building configuration...  
do not reset or power off the device!  
% Saving 5376 bytes to flash:startup-config  
MGSW-28240F#
```

Figure 4-8: Saving Current Configuration Command Screen



#### Note

If you are not familiar with the console command or the related parameter, enter **"help"** anytime in console to get the help description.

## 5. Starting Web Management

The following shows how to start up the **Web Management** of the Managed Metro Switch. Note the Managed Metro Switch is configured through an Ethernet connection. Please make sure the manager PC must be set to the same **IP subnet address**.

For example, the default IP address of the Managed Metro Switch is **192.168.0.100**, then the manager PC should be set to **192.168.0.x** (where x is a number between 1 and 254, except 100), and the default subnet mask is 255.255.255.0.


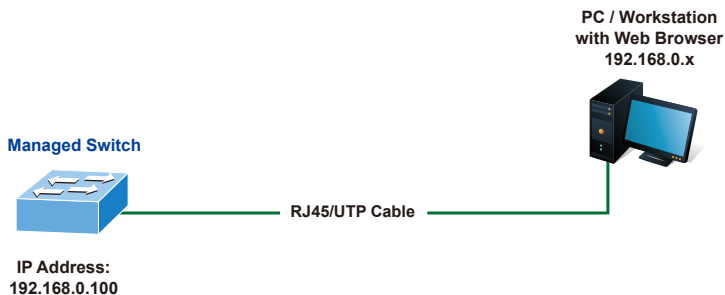 


Figure 5-1: IP Management Diagram

## 5.1 Logging in to the Managed Metro Switch

 1. Use your preferred web browser such as Chrome, Edge, Firefox, etc. and enter IP address **https://192.168.0.100** (the factory default IP address or the one that you have just changed in console) to access the Web interface.
2. When the following dialog box appears, please enter the default username and password. (or the password you have changed before) as shown in Figure 5-2.

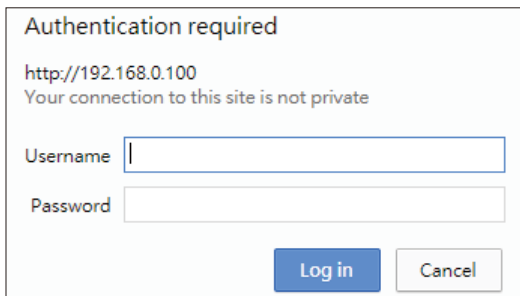

Authentication required

http://192.168.0.100  
Your connection to this site is not private

Username

Password

Log in Cancel

Figure 5-2: Login Screen



### Note

The following web screen is based on the firmware version before **February of 2024**.

- 2.1 When the login dialog appears, please enter the default username and password.

Default IP Address: **192.168.0.100**

Default Username: **admin**

Default Password: **admin**



## Note

 
The following web screen is based on the firmware version of **February of 2024 or after**.

2.2 When the following dialog box appears, please enter the default user name **"admin"** and and password.

Default IP Address: **192.168.0.100**

Default Username: **admin**

Default Password: **sw + the last 6 characters of the MAC ID in lowercase**

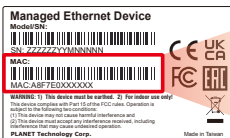

MAC ID: A8F7E0XXXXXX  
Default Password: swxxxxxx  
("x" means the last 6 digits of the MAC address.  
All characters should be in lowercase.)

Figure 5-3: MAC ID Label

2.3 After logging in, you will be prompted to change the initial password to a permanent one.

### Change Password

New Password	
Password	<input type="password"/> <input type="checkbox"/> show password
Retype Password	<input type="password"/>

The password must contain 8-31 characters, including upper case, lower case, numerals and other symbols. Please note, spaces (blanks) are not accepted.

Figure 5-4: Change Password Screen



## Note

If you have already changed the password via console or web login, please use this new password to log in and skip steps **2.2** and **2.3**.

3. After entering the password, the main screen appears as Figure 5-3 shows.



Figure 5-5: Web Main Screen of Managed Metro Switch

The Switch Menu on the top of the Web page lets you access all the commands and statistics the Managed Metro Switch provides. The Switch Menu always contains one or more buttons, such as **“Refresh”**, **“Save”**, **“Help”** and **“Logout”**.



Figure 5-6: Switch Menu



**Figure 5-7:** Switch Menu–System



**Note**

If you are not familiar with Switch functions or the related parameter, press **“Help icon”** anytime on the Web page to get the help description.

Now, you can use the Web management interface to continue the Switch management or manage the Switch by console interface.

Please refer to the user’s manual for more.



 
## 5.2 Saving Configuration

To save all applied changes and set the current configuration as a startup configuration on the Web user interface, the startup-configuration file will be loaded automatically across a system reboot.


1. Click the **Save** icon on the top Switch Menu bar.



2. Press the "**Save Configuration**" button.



 3. Or the other way to save the setting is to Click **Maintenance, Save Startup Config**.

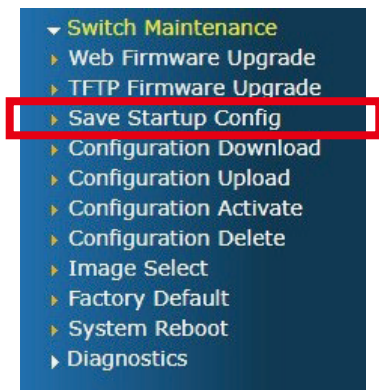

## 6. Recovering Back to Default Configuration

■ IP address has been changed or admin password has been forgotten –

To reset the IP address to the default IP address “192.168.0.100” or reset the login password to default value, press the hardware-based reset button on the front panel for about 10 seconds. After the device is rebooted, you can log in the management Web interface within the same subnet of 192.168.0.xxx.

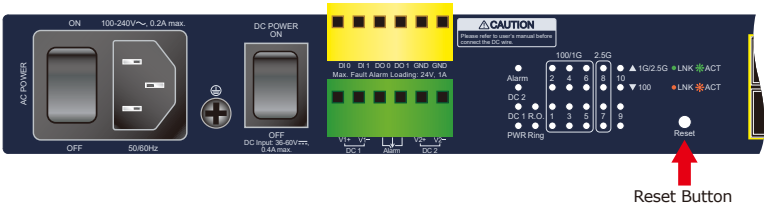 


Figure 6-1: MGSD-10080F Reset Button

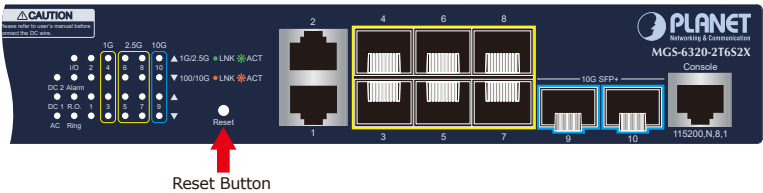 


Figure 6-2: MGS-6320-2T6S2X Reset Button



Figure 6-3: MGSW-28240F Reset Button

---

## 7. Customer Support

Thank you for purchasing PLANET products. You can browse our online FAQ resource and User's Manual on PLANET Web site first to check if it could solve your issue. If you need more support information, please contact PLANET switch support team.

PLANET online FAQs:

<http://www.planet.com.tw/en/support/faq>

Switch support team mail address:

[support@planet.com.tw](mailto:support@planet.com.tw)

MGSW/MGSD series User's Manual:

<https://www.planet.com.tw/en/support/downloads?&method=keyword&keyword=MGS&view=3#list>



(Please select your switch model name from the drop-down menu of Product Models.)

Copyright © PLANET Technology Corp. 2024.

Contents are subject to revision without prior notice.

PLANET is a registered trademark of PLANET Technology Corp.

All other trademarks belong to their respective owners.