High Definition Color PoE IP Phone

VIP-1140PT/VIP-1260PT

Quick Installation Guide

Table of Contents

Verify The Contents Inside The Package Box	3
Hardware Installation	4
Starting Web Management	6
Further Configuration	7

Verify The Contents Inside The Package Box

The package should contain the following items plus VIP-1260PT. If any item is missing or damaged, please contact the seller immediately.


	VIP-1140PT	VIP-1260PT
Lines (Direct Numbers)	4	6
Network Interface	10/100	10/100/1000
LCD Display	2.4-inch	2.8-inch

VoIP Phone	Quick Installation Guide Sheet
	Life part dender and year \$1.000 periods The part of the part o
Handset	Handset Cord
Stand	RJ45 Cable
	O

Hardware Installation


Step 1. Installation

Option 1: Tilted Stand on the desktop. Take the stand and hook it on the back of the phone. There are two $\,$ angles for your selection.

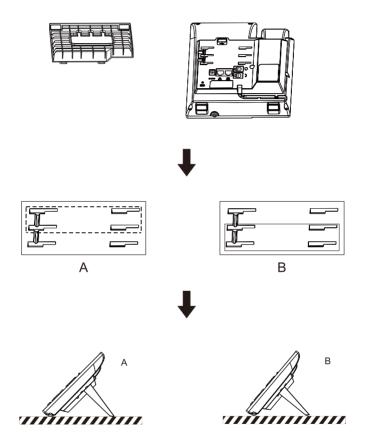

Step 2. Connecting to the Device

Please connect PoE network, PC and handset to the corresponding $\,$ ports as described in the diagram below.

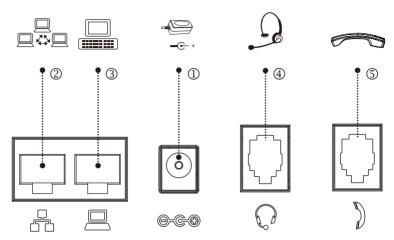

Index	Description
1	Power port: Power requirement 5V 600mA
2	Internet port: Connect to the Intranet (Only Intranet port supports PoE. Connect to an IEEE 802.3af/at PSE device such as 802.3af injector/hub or 802.3af/at PoE switch.)
3	PC port: Connect to the computer
4	Headset port: External RJ9 earphone
(5)	Handset port: Connect to IP phone handset



- 1. The VoIP phone also supports IEEE 802.3af/at. PoE Be reminded to power either from AC adapter or PoE switch.
- 2. The AC adapter is not included.

Starting Web Management

Step 1. Computer Network Setup

Set your computer's IP address to 192.168.0.x, where x is a number between 2 and 254 (except 1 where is being used for the phone by default). If you don't know how to do this, please ask your network administrator.

Step 2. Login Prompt

Use Web browser Microsoft Edge , Chrome, Firefox, or Safari (for Mac) to connect to **192.168.0.1** (Type this address in the address bar of Web browser.)

You'll be prompted to input user name and password: admin and 123.



Default IP address: **192.168.0.1**Default user name: **admin**Default password: **123**

Further Configuration

For detailed configuration, please check user's manual which you can download from the website.



https://www.planet.com.tw/en/support/downloads?%20&method=keyword&keyword=VIP&view=3#list

If you have any other question, please contact the dealer where you purchased this product or you can contact PLANET directly at the following email address: support@planet.com.tw